




# Oster 6329 Bread Grabber Spring Replacement

This guide will walk you through replacing the spring that closes the toaster carriage.

Written By: Isaac Williams

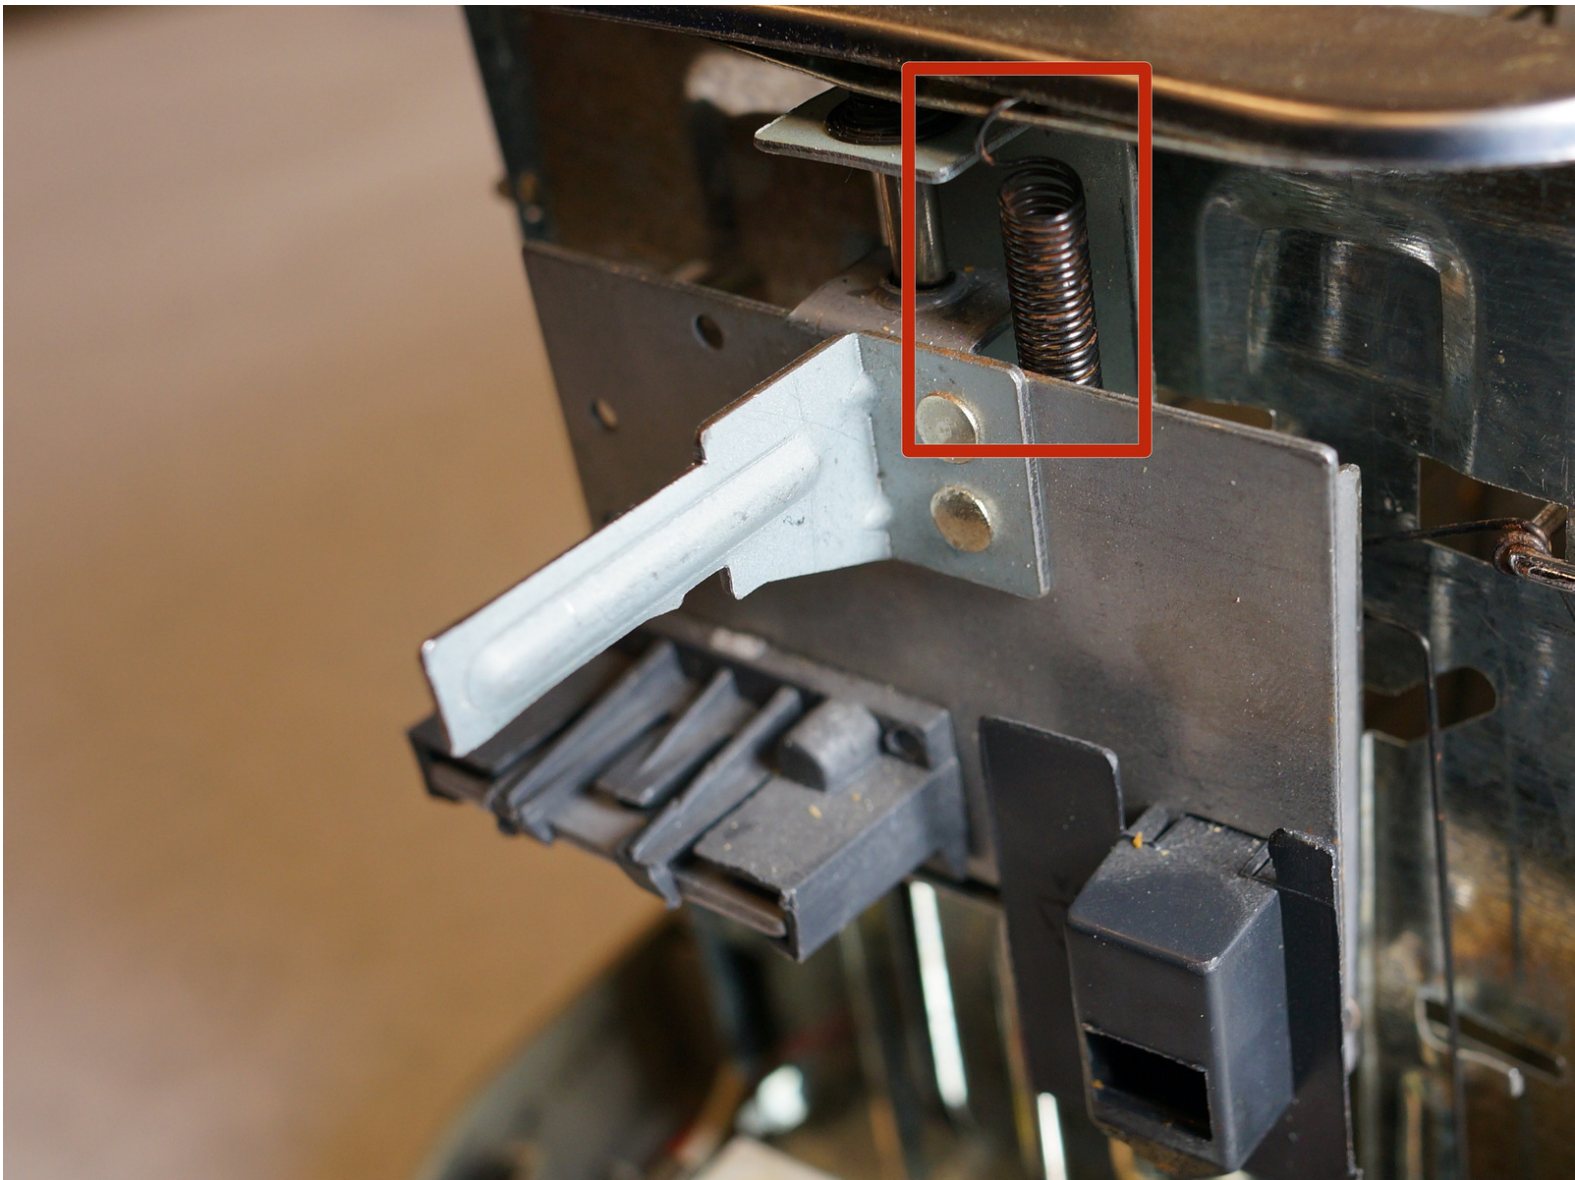

## INTRODUCTION

This repair is challenging because the wire that acts as the spring is difficult to bend into the correct shape.

---



### TOOLS:

- [Phillips #1 Screwdriver](#) (1)
  - [1 x Large Needle Nose Pliers](#) (1)
-

## Step 1 — Outer Shell Removal



- Using the Phillips-head #2 screwdriver, unscrew the three 1cm Phillips-head screws on the plastic base of the toaster to separate the outer metal shell from the plastic base.

## Step 2



- Push the plastic push-down handle down and pull the plastic handle straight from metal arm.




## Step 3




- Loosen the outer metal shell from the plastic base by holding the plastic base while pulling up on the metal shell.
- ⓘ Only lift the outer shell a little so as not to disconnect the cables that connect the circuit board.

## Step 4

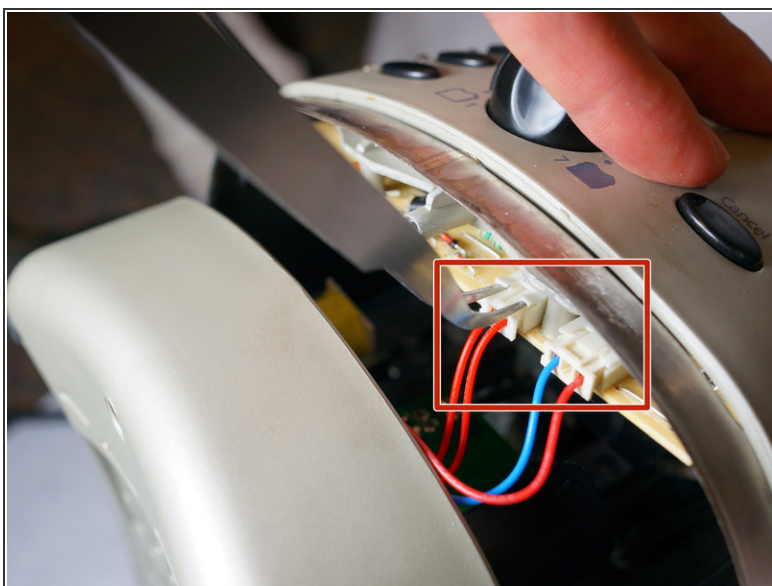

- Disconnect the cable clips from the circuit board using the tweezers to free the outer metal shell from the plastic base.


## Step 5

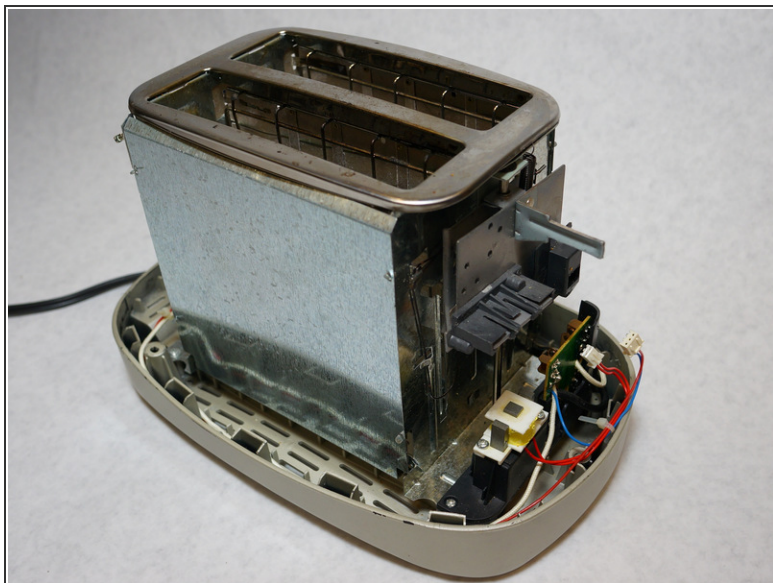

- Lift the top outer metal shell.

⚠ Carefully lift the outer metal shell at an angle so as not to damage the components in the front of the toaster.


## Step 6 — Bread Grabber Spring

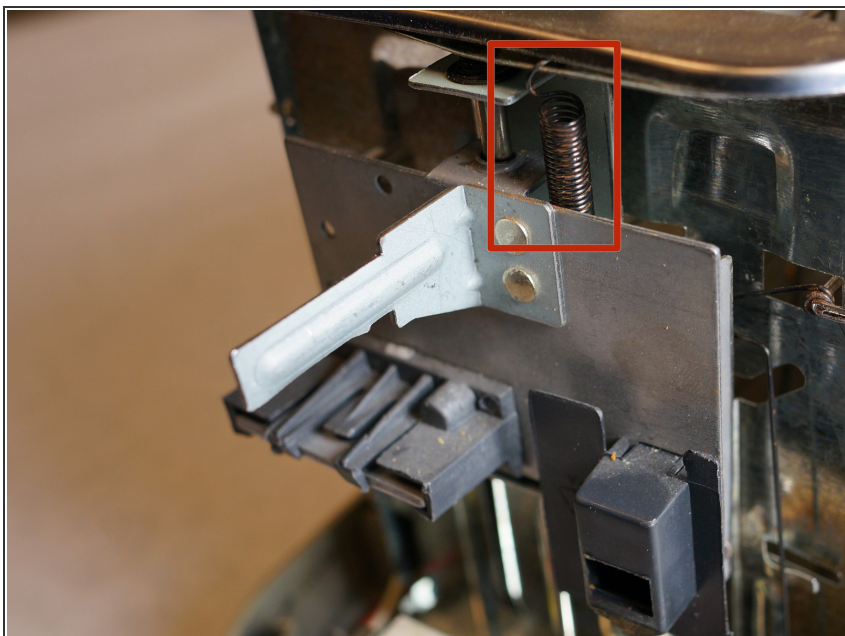

- Press down on the toaster handle to access to the grabber spring located behind the large metal plate.




## Step 7

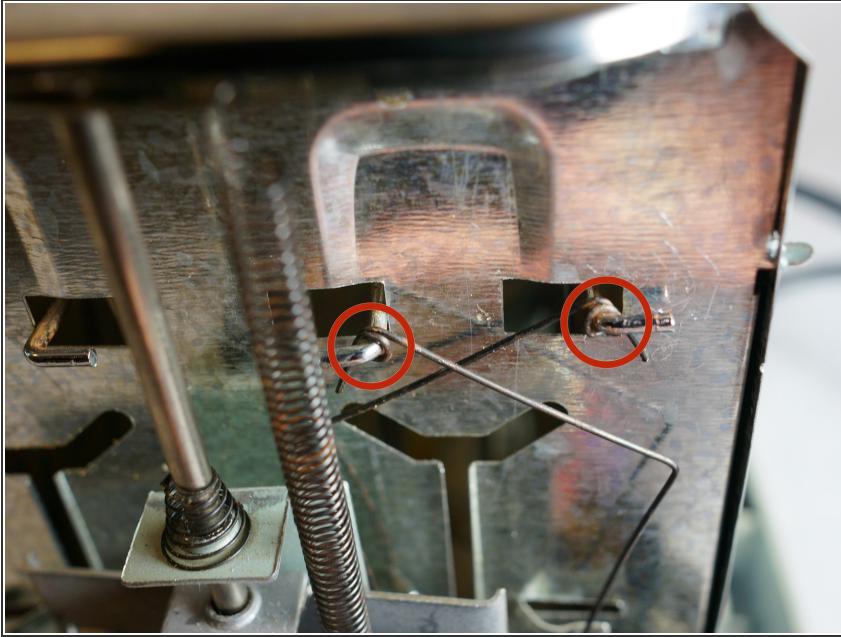


- Locate the grabber spring.

## Step 8

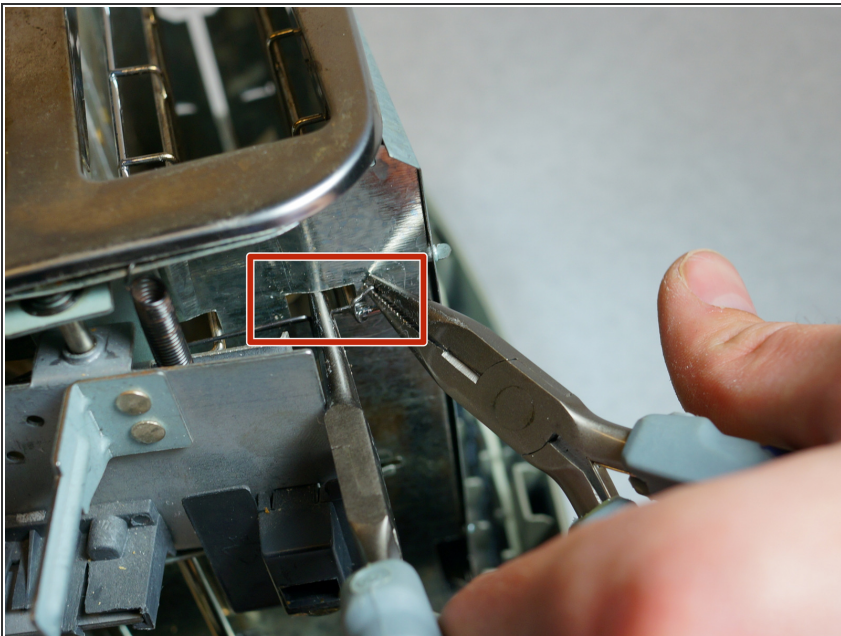

- Use the large needle nose pliers to unwind the grabber spring from one side of the carriage to remove.
- Repeat this step for the opposite side.

## Step 9

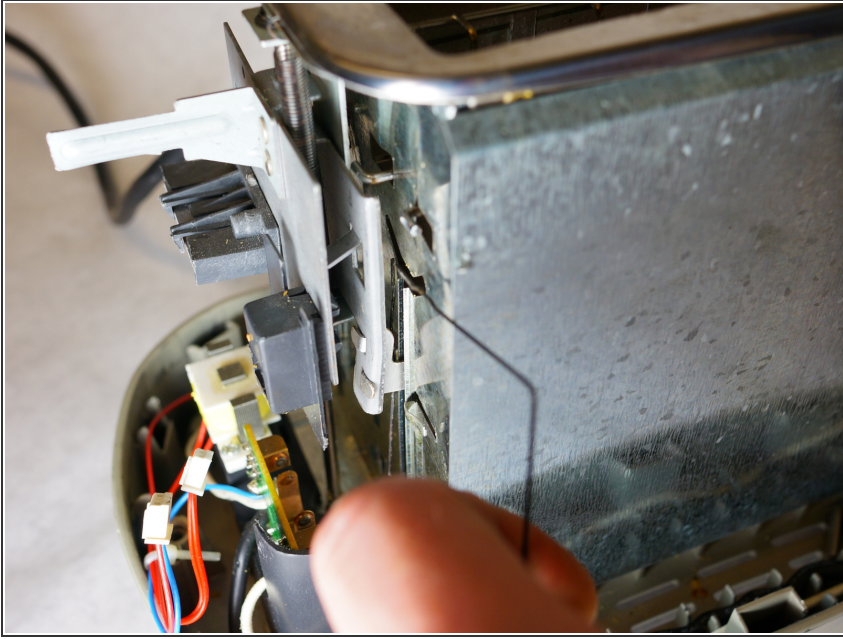

- Remove the old spring from the toaster unit to insert new.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-09-08 04:29:56 AM.